


Operator Manual - Manual injection mode with or without threshold (without sleeves)

Starting the PocketLIM

Press the "On/Off" button.
Select the **"Injection"** option using the arrows and press the

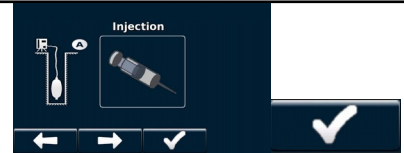

Check that **"Manual"** mode is active. If not, press **"Mode"** to switch from **"Auto"** mode to **"Manual"** mode.




Line selection (if at least 2 lines are active)

When starting up, PocketLIM selects the first line detected. If you want to work with another line, press the left side of the screen.



Press the number of the line you wish to use. **Note:** Lines with numbers displayed in "white" (e.g., 3 and 4) are not connected, and lines with numbers displayed in "green" are in use (e.g., 1 and 2).
example, 1 and 2).

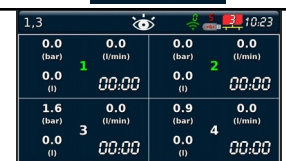

Starting a test

Press **"Start."**



Enter your injection settings (see user manual). If you want to work with thresholds (criteria), set the "Threshold" option to "On"; otherwise, set it to "Off."




Confirm by pressing "BP4." If the threshold option is set to "Off," you will go directly to the test execution phase. If the option is set to "On," you must enter your criteria.



Entering stop criteria

Select the line of the criterion to be modified, press "V" or "BP3," then enter its value using the on-screen keyboard.

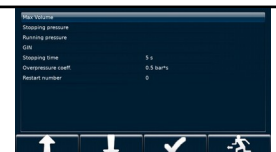

Once all criteria have been entered, press "BP4" to access the "Test Start" menu.



Running the test

Press **"Stage."**



Press "Start" to begin recording. **Note**
: If the pump start system is connected to the "Auto" input of the CAN box, the pump starts automatically; otherwise, you must start it using its own control panel.



If the threshold option is enabled, when a criterion reaches its setpoint, the corresponding parameter is displayed in red. However, in this operating mode, the pump will only stop when the operator intervenes.




Press "Pause" to stop the phase.



If you want to restart a step for this point, press "Start" again. If your test is complete, press "End of step."



If you are continuing to inject into the same borehole, press "Step." If injections into this borehole are complete, press "End Hole" to return to the standby screen.

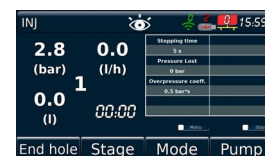

Note

I) On the standby screen, if you see " " above BP1, it means that all your lines are stopped. If you see one or more numbers " 1.2 ", it means that the corresponding lines are running. To check them, return to the **"Line Selection"** step.



II) Regardless of the current mode, if the settings table is displayed, pressing it will bring up the injection curves on the screen.
To return to the standard display, press the screen again.

