


Operator Data Sheet PressioLIM Automatic Test Registration

Starting PocketLIM

Press "Start/Stop" M/A
Use the arrows to select the "**Essai L. Ménard Auto**" option, then press "**Valider**".

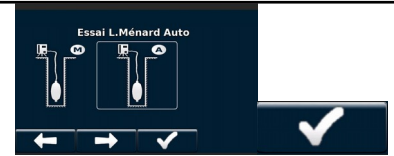

Prepare for recording

Press "**Start**"



Check and, if necessary, modify the probe corresponding to your test by pressing the "**Probe**" text. Position the dot opposite the reference of the probe used.

Sonde
44-CA-C-63 (tube fendu)

Return to the previous screen



Select the type of test by pressing the corresponding area of the screen.

NB: if you have to repeat a calibration and an inertia, you must start with the calibration and then perform the inertia.



If necessary, modify your test parameters by selecting them with the arrows (or by pressing on the screen), then press "**V**" to validate your changes.




Press "**exit**" to move on to the next screen.



If you choose the calibration or inertia test, you don't need to do the next step.

For the field test, if necessary, modify each item of information on the following screen by pressing the corresponding "**square**" to activate or deactivate it, or press its label to modify it.

Enter the **dimension** of the test, then **validate** your entry.

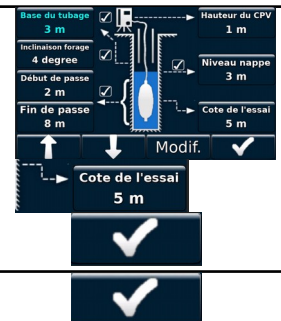

Press "**Validate**" to move on to the next screen.



Test run



Calibration



Inertia



Field

From the waiting screen corresponding to the chosen test, press the "**ΔP Auto**" or "**ΔP Manu**" icon to modify the first stage pressure if required. Select it by positioning the point



in front of it with the arrows, validate by pressing " Exit ".this operation is not functional, the Delta P is imposed by PocketLIM.																																																																																																
Press " Start " to launch the first stage.																																																																																																
Pressing the center of the screen displays a table with the values of previous stops, a second press displays the curve of the current test, and the next press takes you back to the start of recording screen .	<table><thead><tr><th>Temps</th><th>1</th><th>15</th><th>30</th><th>60</th></tr></thead><tbody><tr><td>Vol.</td><td>293</td><td>293</td><td>293</td><td>293</td></tr><tr><td>Pr</td><td>0.00</td><td>0.00</td><td>0.00</td><td>0.00</td></tr></tbody></table><table><thead><tr><th>Date</th><th>Pr</th><th>V1</th><th>V15</th><th>V30</th><th>V60</th><th>Presses</th><th>ΔP</th></tr></thead><tbody><tr><td>1</td><td>0.00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>1</td><td>0.00</td></tr><tr><td>2</td><td>2.25</td><td>08</td><td>110</td><td>123</td><td>120</td><td>2</td><td>0.00</td></tr><tr><td>3</td><td>2.00</td><td>110</td><td>120</td><td>120</td><td>120</td><td>0</td><td>0.00</td></tr><tr><td>4</td><td>4.16</td><td>123</td><td>123</td><td>123</td><td>123</td><td>0</td><td>0.00</td></tr><tr><td>5</td><td>7.00</td><td>120</td><td>120</td><td>120</td><td>120</td><td>0</td><td>0.00</td></tr><tr><td>6</td><td>12.01</td><td>120</td><td>120</td><td>120</td><td>120</td><td>1</td><td>0.00</td></tr><tr><td>7</td><td>18.02</td><td>141</td><td>140</td><td>140</td><td>141</td><td>1</td><td>0.00</td></tr><tr><td>8</td><td>24.13</td><td>142</td><td>142</td><td>142</td><td>142</td><td>0</td><td>0.00</td></tr><tr><td>9</td><td>30.24</td><td>144</td><td>144</td><td>144</td><td>144</td><td>0</td><td>0.00</td></tr></tbody></table>	Temps	1	15	30	60	Vol.	293	293	293	293	Pr	0.00	0.00	0.00	0.00	Date	Pr	V1	V15	V30	V60	Presses	ΔP	1	0.00	00	00	00	00	1	0.00	2	2.25	08	110	123	120	2	0.00	3	2.00	110	120	120	120	0	0.00	4	4.16	123	123	123	123	0	0.00	5	7.00	120	120	120	120	0	0.00	6	12.01	120	120	120	120	1	0.00	7	18.02	141	140	140	141	1	0.00	8	24.13	142	142	142	142	0	0.00	9	30.24	144	144	144	144	0	0.00
Temps	1	15	30	60																																																																																												
Vol.	293	293	293	293																																																																																												
Pr	0.00	0.00	0.00	0.00																																																																																												
Date	Pr	V1	V15	V30	V60	Presses	ΔP																																																																																									
1	0.00	00	00	00	00	1	0.00																																																																																									
2	2.25	08	110	123	120	2	0.00																																																																																									
3	2.00	110	120	120	120	0	0.00																																																																																									
4	4.16	123	123	123	123	0	0.00																																																																																									
5	7.00	120	120	120	120	0	0.00																																																																																									
6	12.01	120	120	120	120	1	0.00																																																																																									
7	18.02	141	140	140	141	1	0.00																																																																																									
8	24.13	142	142	142	142	0	0.00																																																																																									
9	30.24	144	144	144	144	0	0.00																																																																																									
While the stop is in progress, you can change the next delta P by pressing ' ΔP Auto ' or ' ΔP Manu ' .	ΔP auto 1.00 bar ΔP manu 0.25 bar																																																																																															
At the end of the stop : ➡if you are in "Auto ON" mode, the PressioLIM launches the next stop without operator intervention and automatically selects the new Delta P (depending on creep) ➡if you are in "Auto OFF" mode, the PressioLIM waits for the operator to press " Start " to launch the next stage. The previous delta P is retained unless the operator modifies it by pressing the " ΔP Manu " icon.	 ΔP manu 0.25 bar																																																																																															
The operator can stop the test at the end of the current stage by pressing " Stop ".																																																																																																
The operator can stop the test immediately by pressing " Emergency stop ", the PocketLIM records the current stop and immediately purges the probe.																																																																																																
When your test is complete, press " End " to close it.																																																																																																