

# eMindLogger GRS

## User Manual

# Table des matières

<i>Before you start...</i> .....	3
<b>1. Main program window</b> .....	<b>4</b>
1.1 Depth, logging speed and display configuration panel.....	5
<b>2. System and probe configuration</b> .....	<b>9</b>
2.1 Winch settings.....	9
2.2 Probe settings.....	10
2.3 Communication configuration and status display.....	11
2.4 Data acquisition configuration.....	12
Trace length : .....	12
Sampling:.....	12
<b>3. The spectral « scope » display window</b> .....	<b>13</b>
<b>4. Program menus</b> .....	<b>14</b>
<b>4.1 File menu</b> .....	<b>14</b>
4.1.2 Record a new log : .....	15
4.1.2.1 Log header: client and borehole site.....	16
4.1.2.2 Log header: log datum information.....	16
4.1.2.3 Log header: borehole information.....	17
4.1.2.4 Log header: borehole diameter and casing information.....	17
4.1.2.5 Log header: other remarks.....	18
4.1.3 Export a file:.....	19
4.1.3.1 Format SEG2.....	19
4.1.3.2 Format LAS 2.0 .....	19
4.1.5 Exit.....	20
<b>4.2 Tools menu</b> .....	<b>21</b>
<b>5. Appendices</b> .....	<b>22</b>
<b>5.1 Example EmGRS.tol configuration file</b> .....	<b>22</b>
<b>5.2 Example probe import *.grv file</b> .....	<b>22</b>
<b>5.3 Configuration of the energy windows in the spectral "scope " display window</b> .....	<b>23</b>
<b>6. What do to if</b> .....	<b>24</b>
The data window depth scale does not display correctly. ....	24
An error message « Can't load FTD2xx.dll » appears.....	24
How to add an additional sonde for use with the system ?.....	24
I would like to modify the energy windows appearing on the spectral « scope » display.....	24

## Before you start...

This software is supplied with the files necessary for the operation of the sonde(s) for which it was developed and has been optimised to operate under Microsoft Windows XP in mode 32-bit colour.

On connecting the eMind logger acquisition system to your computer for the first time, you will be asked to install the USB drivers. The necessary files and installation documentation can be found both in the subdirectory "Driver" of the eMind logger GRS application on your hard-disk and on the supplied eMind logger GRS installation CDROM. These files are also available for download from our web site [www.electromind.eu](http://www.electromind.eu) by following the link to the [Software demos/updates](#) page and clicking on [Full package v1.06.06 with user guide FR & UK](#) under *Installation of the USB driver*.

The GRS software generates and maintains a global configuration file (emGRS.tol) that incorporates configuration information for each Spectral Gamma probe installed on your system. A file appropriate to the hardware supplied will have been installed on your system along with this program. Be attentive to the fact that the erasure or inappropriate modification of this file can lead to incorrect system operation and, in some cases, even damage to your down hole probe. A functional .tol file can, if necessary, be regenerated by deleting all installed probes from your system and re-importing them using the relevant text format Spectral Gamma sonde import file (*sonde\_name.grv*), also supplied on your installation CDROM.

Several sample data files (\*.gre) are also included in the software installation package. Following installation, these files can be located in the « Demo » subdirectory of your chosen application installation location. This file allows the user to become familiar with the use of the software in replay mode.

Recommended minimum system configuration:

Intel Pentium XXX MHz/ AMD Athlon 1800 – 256 MB RAM – 1 free USB port

OS: Microsoft Windows XP (SP1) or Microsoft Windows 2000.

# 1. Main program window

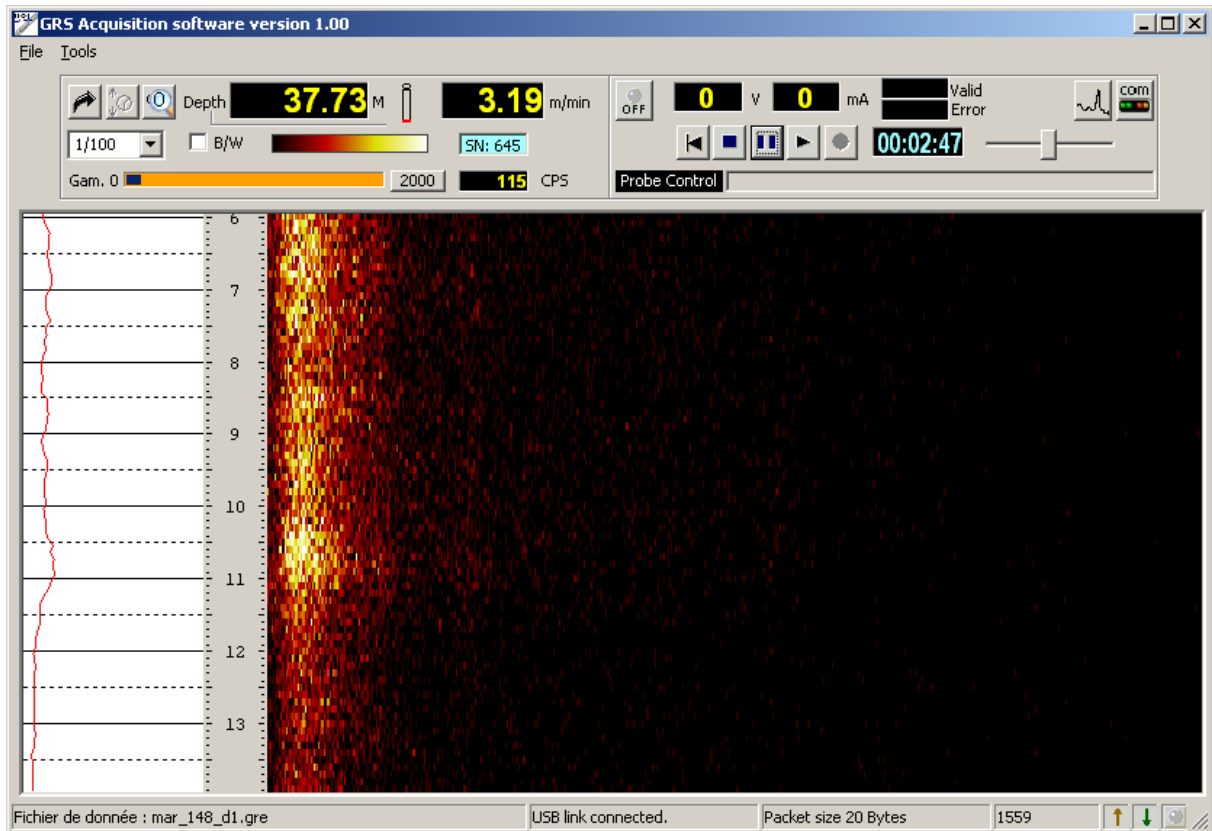


Fig. 1.0 Main program window with control panel and data display zones.

The main program window is divided into several areas concerned with different aspects of the sonde configuration and logging operations.

The current sonde depth, logging speed and a number of other parameters are displayed in the upper left part of the screen (Fig.1.2).

In the upper right part of the control panel are found the different controls and information for sonde power switching and data acquisition or replay (Fig.1.6).


A status bar in the lower part of the screen provides additional information concerning system status, data transmission and the recording in progress (Fig.1.1).

Additionally, the programme menu bar allows access to other functions related to data recording or replay and sonde or system configuration options.


## The program status bar information display :

Acquisition Mode.	USB link connected.	Packet size 539 Bytes	1882	↑ ↓
Data file being acquired or replayed	System/USB information	Reception status	Data packet counters	
Fichier de donnée : mar_148_d1.gre	USB link connected.	Packet size 20 Bytes	1559	↑ ↓

Fig. 1.1

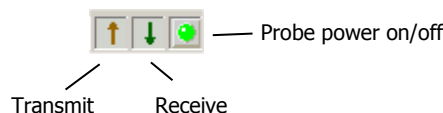


## 1.1 Depth, logging speed and display configuration panel

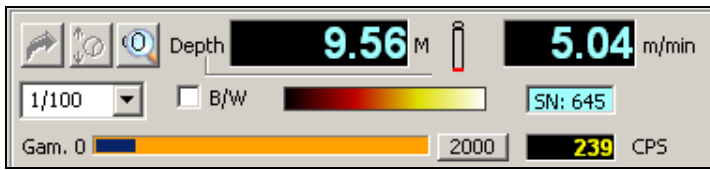

Reference= probe bottom

Fig. 1.2a Replay mode

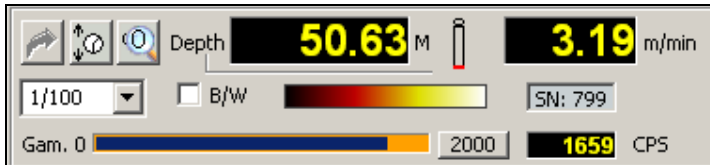

Reference= probe top


Fig. 1.2b Acquisition mode – automatic gamma scaling

The current tool depth and logging speed are updated continuously in real time while the eMind Logger is powered on and connected to the logging computer's USB port.

While in acquisition mode, the depth display (in yellow) indicates the current depth of the probe. The depth display becomes blue when the eMind Logger is powered off or when operating in replay mode. In the latter case, the depth display indicates the point reached in the data file replay.



The log data display depth scale can be selected from this drop down list box at the extreme left of the panel. In depth mode, the user will be alerted, by means of the logging speed indicator, if the actual winch speed is too high for the sampling rate and sonde configuration chosen.

A double-click on the depth reference icon  changes the log depth reference from the top to the bottom of the probe, or vice-versa.

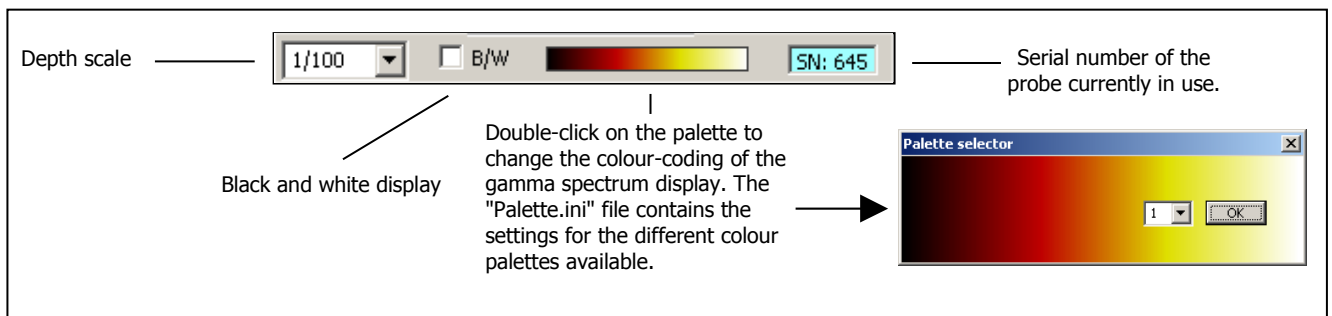


Fig. 1.2c Setting the gamma spectrum display mode

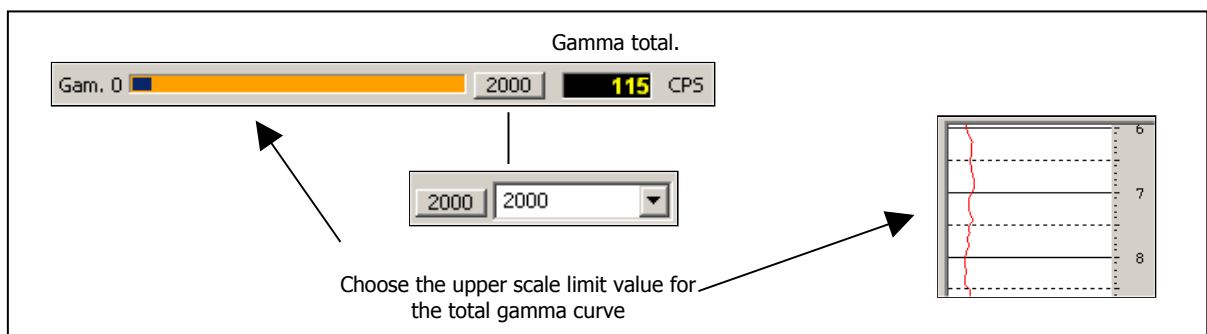



Fig. 1.2d Setting the total gamma display mode

The depth setting button  allows the operator to enter an initial depth value prior to commencing a logging run, providing that the eMind Logger is connected and powered on and that the logging tool is not powered on. (Fig.1.4).

The depth value entered at this point should correspond to the depth offset between the probe head connector locking collar and the chosen log depth reference (e.g. ground level, top of casing). When the probe head connector locking collar is located **above** the log depth reference level a **negative** offset should be entered.

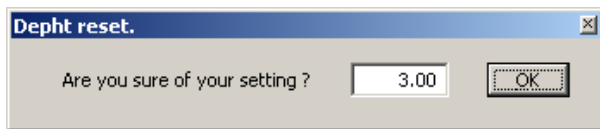





Fig.1.3

Thereafter, the current tool depth can be displayed in one of two ways : with respect to the probe head connector locking collar or, alternatively, with respect to the bottom of the probe. Double-clicking on the sonde icon to the right of the depth value display will switch the depth display between these modes, with the icon changing accordingly.

Depth at sonde top displayed :  ← → Depth at sonde bottom displayed : 

With the sonde powered on, the data display mode can be chosen by means of the  button from the three options available at this point : depth up, depth down and time (Fig. 1.4). Stacking mode is only enabled when recording a data file.

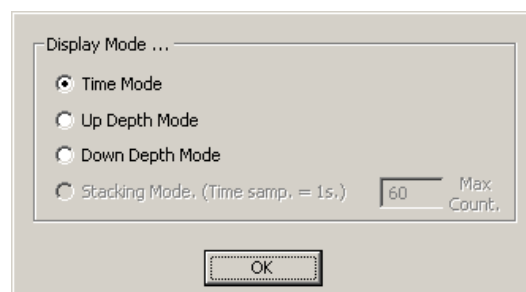


Fig.1.4



The log data display depth scale can be selected from this drop-down list box at the extreme left of the panel.


Clicking on the magnifying glass icon  in the upper left part of this panel opens an enlarged depth display window as shown below:



Fig.1.5

This display window, which also provides the current logging speed, can be closed either by double-clicking on it or by clicking on the close window button in its upper right-hand corner.

## 1.2 Sonde data replay and recording controls

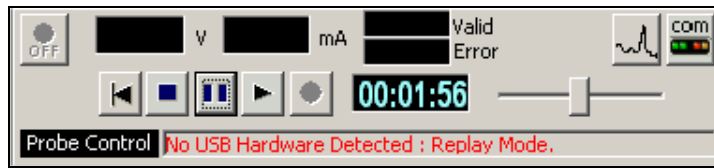



Fig. 1.6a Replay mode

 Click to open the gamma spectrum display tool

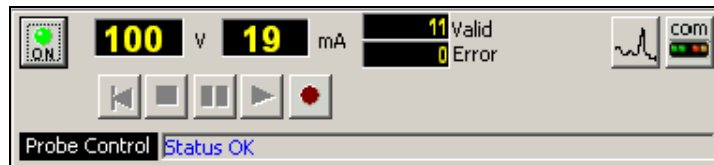



Fig.1.6b Acquisition mode

 Click here for probe and system configuration options

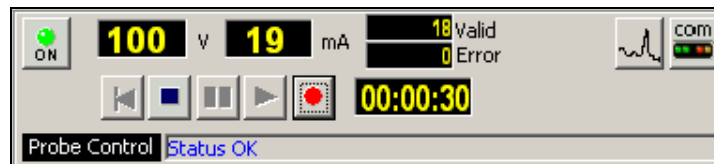

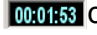









Fig. 1.6c Acquisition mode with recording in progress


This control panel changes according to how the software is currently being used :

In **replay mode** (Fig. 1.6a). The control buttons  operate as for a video recorder. The timer display  opens as soon the play button  is clicked to start log replay. File replay speed can be adjusted with the sliding cursor control . A replay in progress can be stopped temporarily by means of the pause button:  and, while in pause mode, the restart button  allows a replay to be restarted from the beginning of the current data file. Clicking on the stop button  will terminate the replay in progress.

**Acquisition mode** (Fig.1.6b): once the eMind Logger is correctly connected and switched on, the probe power button  becomes visible. After checking that system is configured correctly for the sonde by means of the  button (logging cable type, and sonde power voltage), the sonde can be powered up to begin the recording of a log; the probe communication status being indicated by the "Probe Control" display. Alert messages will be displayed here in case of problems, such as the **OVERRUN** message appearing when excessive logging speed causes data loss. The start of data transmission is signalled by a "beep" from the system.

The sonde function status is confirmed by the indicator at the lower right of the main programme window.

As a further check on correct sonde operation, the sonde voltage and current consumption indicators will flash red in the case that abnormal values are detected.

**Recording a log** : when the sonde is powered up and the communication with the sonde correctly configured, the « New log » menu option under « File » becomes available (see section 4.1.2) and the record button  is activated. Either of these methods can be used to begin recording a new log. Confirmation that recording is taking place is given by the



flashing record button , the incrementing data counter and the recording time clock (see Fig. 1.7).




Fig. 1.7

**Stop recording** : this is accomplished by clicking on the stop button  or by switching off sonde power. A new log can then be started using the "File" – "New log" commands.



## 2. System and probe configuration

### 2.1 Winch settings

To access this configuration dialogue, click on the  button from the main program window and then on the **Winch** tab of the setup dialogue box (Fig. 2.0).

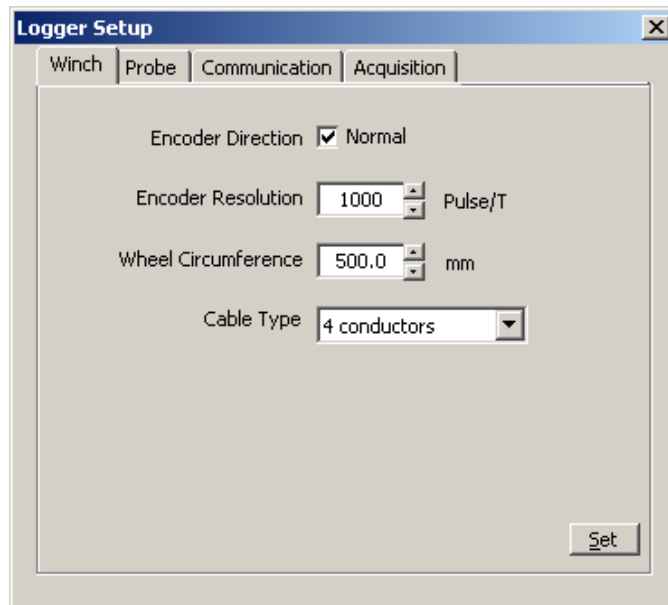


Fig. 2.0


By means of this dialogue box the user configures the software according to the parameters of the logging winch to be used: encoder direction and resolution, depth wheel circumference and logging cable type.

To avoid potential damage to down hole probes, it is particularly important to verify that the system is set up for the correct type of logging cable.

**NB** : Note that, to protect the logging system and connected probes, this configuration dialogue can only be accessed when probe power is switched off.

In replay mode, certain parameter settings may be greyed out to prevent accidental system reconfiguration.

## 2.2 Probe settings

To access this configuration dialogue, click on the  button from the main program window and then on the *Probe* tab of the setup dialogue box (Fig. 2.1).

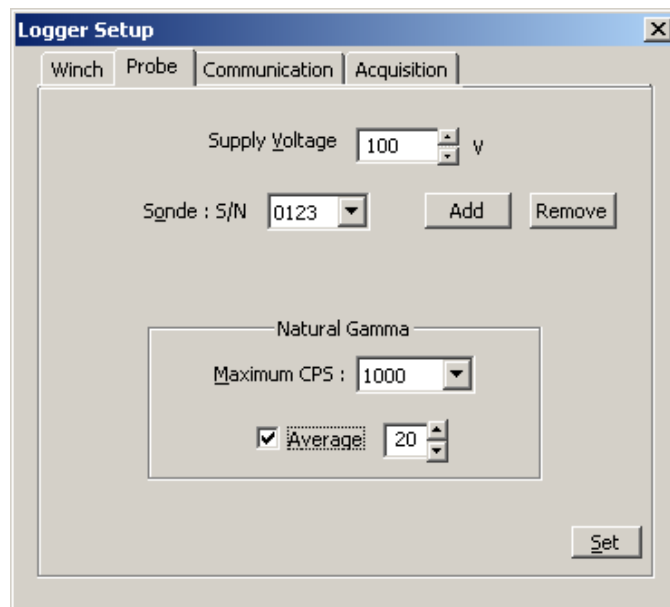


Fig.2.1

The probe **power supply voltage** can be adjusted within the range authorised by the system (80 to 100 Vdc).

The **sonde** to be used is selected, by means of its serial number, from a drop-down list control. This will cause the appropriate settings for the probe in question to be loaded from the global data base file « EmGRS.tol ».


**Adding or deleting a probe** : a new probe can be added to the configuration data base by clicking on the **Add** button. The required import file (\*.grv) will be supplied with your new equipment. The software can manage up to a maximum of 10 probes.

**Natural gamma** : from drop-down list, select the default maximum value for the total natural gamma display scales in the main program window (i.e. the left-hand zone of the data display and the bar-graph in the depth and logging speed display, where the maximum value is also shown on the button that can be clicked on to select a different maximum value). When **Average** is checked, a filter is applied to the total gamma displays. The filtering width factor is shown/set in the adjacent control, values between 2 and 50 are permitted.

**NB** : Note that, to protect the logging system and connected probes, this configuration dialogue can only be accessed when probe power is switched off.

In replay mode, certain parameter settings may be greyed out to prevent accidental system reconfiguration.

## 2.3 Communication configuration and status display

To access this configuration dialogue, click on the  button from the main program window and then on the *Communication* tab of the setup dialogue box (Fig. 2.2).

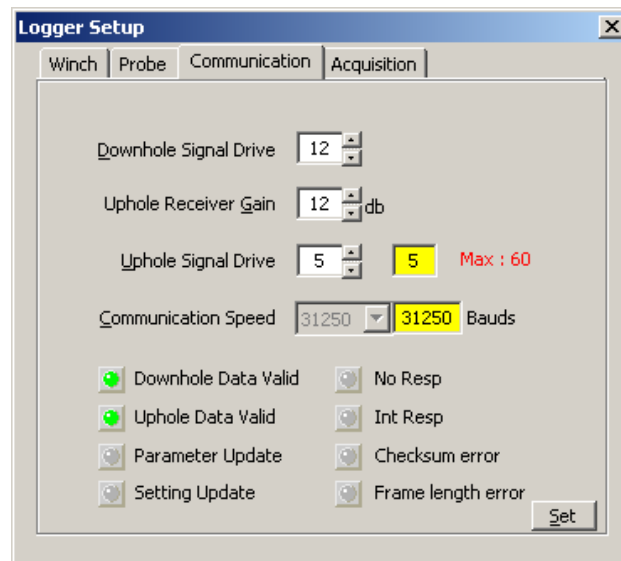


Fig.2.2

### Communication settings

The surface to probe signal level (Down hole Signal Drive), probe to surface signal level (Up hole Signal Drive, acquisition module receiver amplification (Up hole Receiver Gain) and the up hole data transmission speed in Baud can all be adjusted by means of this dialogue, in order to optimise communications in both directions along the logging cable. The communication speed setting cannot be changed by the user from its default value of 31250 Baud

### A correctly configured system will minimise data loss caused by transmission errors.


#### Communications status

The lower part of this dialogue box comprises of a number of LED-type communications status indicators.

- Data Valid **GREEN** ⇒ communications OK
- Parameter or Setting Update **YELLOW** ⇒ system reconfiguration taking place
- No Resp/Int Resp/Checksum Error/frame Length Error **RED** ⇒ indicates a communications problem caused by incorrect configuration or equipment breakdown.

In replay mode, certain parameter settings may be greyed out to prevent accidental system reconfiguration.

## 2.4 Data acquisition configuration

To access this configuration dialogue, click on the  button from the main program window and then on the *Acquisition* tab of the setup dialogue box (Fig. 2.3).

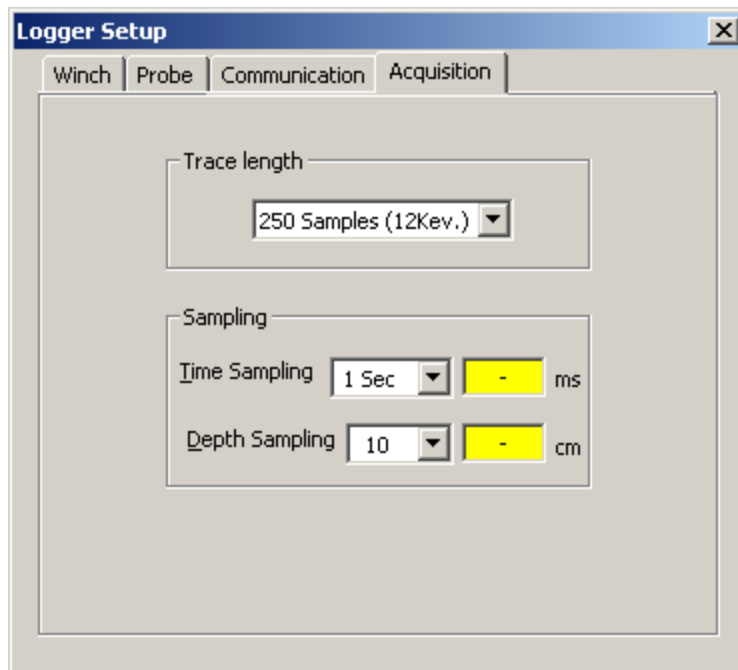


Fig.2.3

### Trace length :

From this drop-down list, either of the two possible configurations can be chosen:

- 250 samples (60 to 3060 keV, by steps of 12 keV);
- 500 samples (60 to 3060 keV, by steps of 6 keV).

### Sampling:

The time mode and depth mode sampling intervals are configured here:

- 1, 2 or 5 seconds for time mode;
- 10, 20, 50 or 100 cm for depth mode.

The adjacent yellow text boxes will also change to confirm that the values have been accepted by the eMind logger hardware.

**NB :** Note that, to protect the logging system and connected probes, this configuration dialogue can only be accessed when probe power is switched off.

### 3. The spectral « scope » display window

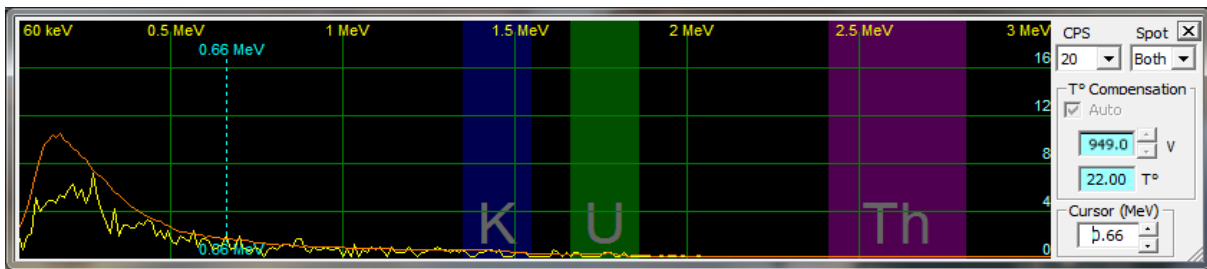



Fig.3.0 : Acquisition mode – automatic temperature correction..

By means of this dialogue window, opened by clicking the  button in the main program window, the user can observe in real-time the spectral data being recorded, as well as control several aspects related to the display scales and configuration of the logging probe.

In the upper right-hand corner under **CPS** the user can set the maximum for the y-axis scale of the display. The possible values for this setting range between 10 and 1000 cps. It is also possible to set a logarithmic scale in order to conserve detail at lower values while allowing the numerically higher, low energy values to be displayed without clipping. In same time you have possibility to choose your representative curve.

Immediately below is the part of the display concerned with configuring the **temperature compensation** of the logging probe by regulating the HT voltage applied to the photomultiplier tube. The objective of this procedure is to correctly calibrate the energy level scale of the probe to match the real MeV values of the natural gamma photons. It is possible to log in either manual or automatic compensation modes. In manual mode, using a test source having one or more known peak energy values, the user can adjust HT values between 900 and 1027.5 Vdc (in steps of 0.5V) until the spectrum is correctly calibrated. During this adjustment procedure, the HT values are shown on a grey background. The background colour reverts to yellow (in acquisition mode) when the probe has been correctly reconfigured according to the chosen value.

Otherwise, in automatic mode, the HT voltage is automatically adjusted within the probe, with respect to the measured temperature value, using a table of calibration values obtained during laboratory testing and incorporated in the probe configuration file (Appendix 5.2).

The display includes an energy level **Cursor** that is positioned either by specifying a value using the MeV setting control, or by clicking and holding the right mouse button and moving the mouse until the cursor is positioned at the desired energy value.

Another feature of the display are three highlighted zones corresponding to the characteristic energy level bands used to determine the concentrations of potassium (K); uranium (U) and thorium (Th):

- potassium (blue) from 1.35 to 1.55 MeV;
- uranium (green) from 1.66 to 1.86 MeV;
- thorium (violet) from 2.41 to 2.81 MeV.

(See appendix 5.3 for information concerning the modification of the energy window limits and labelling)

**NB :** In replay mode, certain parameter settings may be greyed out to prevent accidental system reconfiguration.

## 4. Program menus

### 4.1 File menu

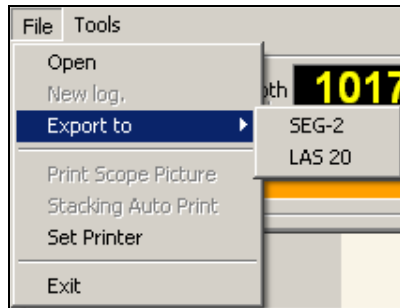


Fig.4.0a

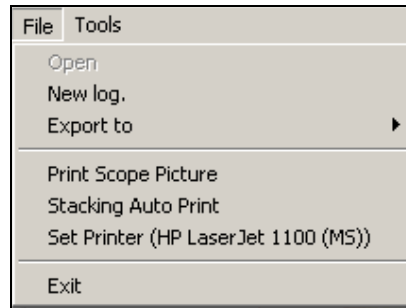


Fig.4.0b

The printing options are made available once the printer settings have been configured.

#### 4.1.1 Open and replay a log : load a data file for replay

Choose the Spectral Gamma field data file (\*.gre) to be replayed by means of the dialogue box (Fig.4.1) that opens on clicking *File, Open*. Click on the *Open* button of the dialogue to load the data file for replay.

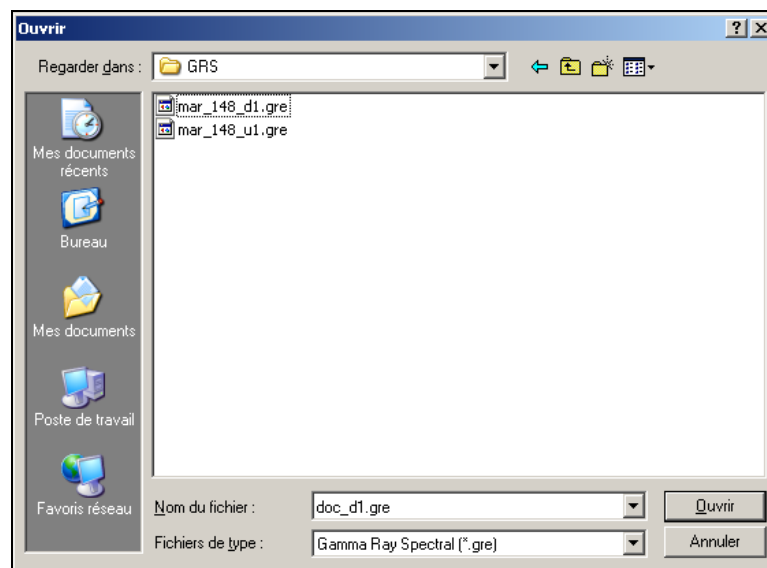



Fig.4.1

An error message will be displayed if the required .hed file cannot be found.

The selected file name will appear in the program status bar and the file replay control buttons will be activated in the main program window.

### 4.1.2 Record a new log :

Begin this procedure by clicking on *File, New log* or on the record button  This requires a probe to be connected and powered on. A dialogue box will then open, asking the user to confirm the type of log to be recorded (Fig.4.2).

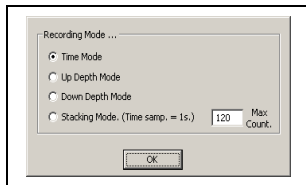



Fig.4.2

The possible recording modes are as follows :

- time mode (1, 2 or 5 second sampling interval);
- depth mode up (10, 20, 50 or 100 cm sampling interval);
- depth mode down (10, 20, 50, 100 cm sampling interval);
- stacking mode (1 second time sampling and averaging for chosen period).

The time and depth mode sample intervals are configured from the *Acquisition* tab of the configuration dialogue box that can be opened by clicking on the  button in the main programme window.

For depth mode, an alert message is displayed if the winch direction does not correspond with the chosen logging mode.

Once the log type has been selected, proceed to enter a file name for the log to be recorded and click on **Save**.

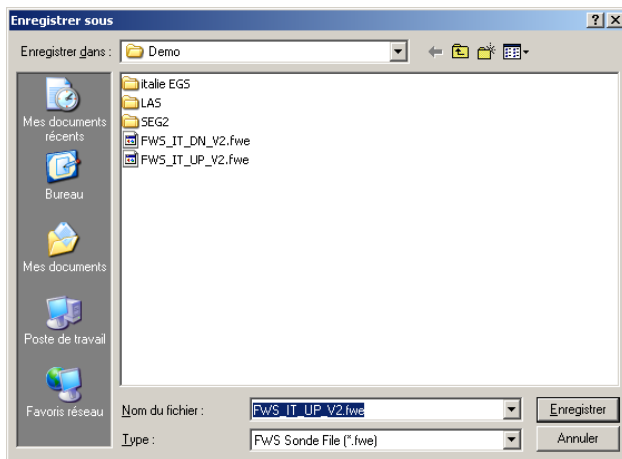


Fig.4.3

At this point, it is possible to complete various different header forms with information to be saved with the field data file (Fig 4.4 - 4.8). Click on **Save** when finished. Clicking on **Cancel** will skip this procedure and return the user to the main program display window.

#### 4.1.2.1 Log header: client and borehole site

Client / Location | Log Datum | Logging Run | Drill Bit Size / Casing | Remarks

Project Heading

Main Log Title

Compagny

Well

Field

Country  Latitude

State  Longitude

OtherServices

Load Reset Cancel Save

Fig.4.4

#### 4.1.2.2 Log header: log datum information.

Client / Location | Log Datum | Logging Run | Drill Bit Size / Casing | Remarks

PermanentDatum

Elevation

Log Datum

Drilling Datum

Kelly Bushing Elev

Drill Floor

Ground Level

Load Reset Cancel Save

Fig.4.5



#### 4.1.2.3 Log header: borehole information.

The screenshot shows a software window with a tabbed interface. The 'Logging Run' tab is active. The window contains the following fields:

Run No	0	Density	
Date	07 August 2006	Level	
Type of log		Max. Temp.	0.00
Depth Driller		Rig. Time.	
Depth Logger		Witnessed by.	
Log Deepest			
Log Shallow			
Fluid in Hole			
Log Engeneer			
Salinity			

Buttons at the bottom: Load, Reset, Cancel, Save.

Fig.4.6

#### 4.1.2.4 Log header: borehole diameter and casing information

The screenshot shows the same software window with the 'Drill Bit Size / Casing' tab active. The 'Run No' field is 0. The main area contains two sections:

Casing Record		BitRecord	
Size		Bit	
Weight		From	
From		To	
To			

Buttons at the bottom: Load, Reset, Cancel, Save.

Fig.4.7

**4.1.2.5 Log header: other remarks**



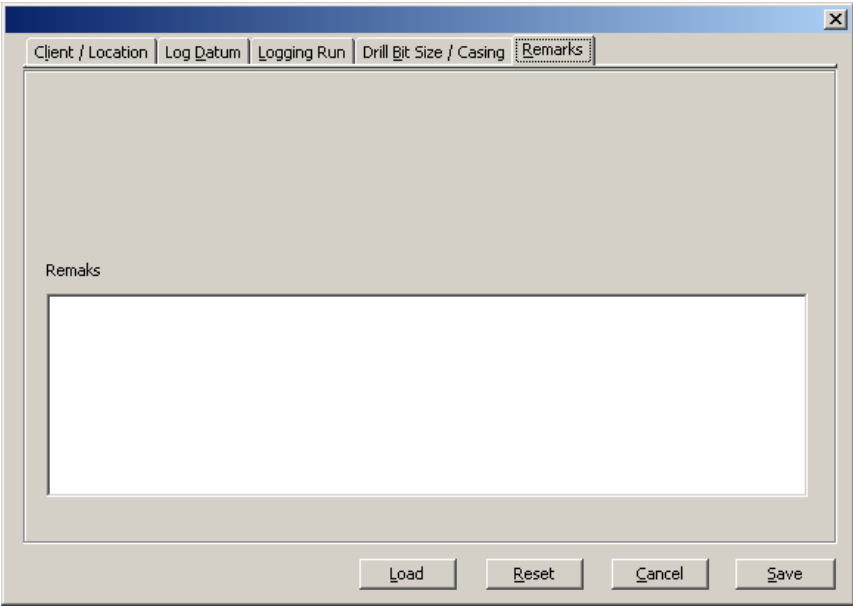


Fig.4.8

### 4.1.3 Export a file:

#### 4.1.3.1 Format SEG2

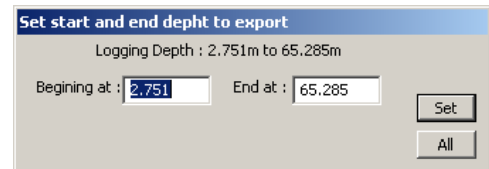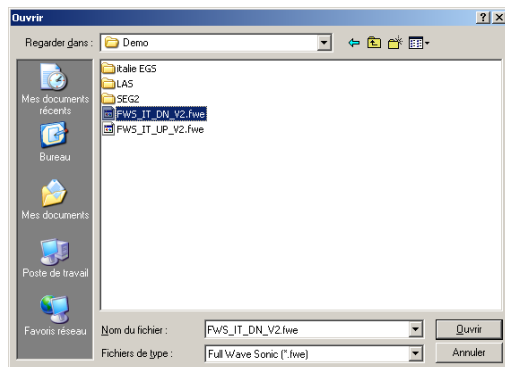

Click on *File, Export to, SEG-2*. Choose the \*.gre file to be exported. A subsequent dialogue displays the start and end depths of the data file: the file can either be exported in its entirety by clicking on **All**, or over a certain interval by entering the start and end depths and clicking on **Set**.

The generated files are placed in a directory named *SEG2* that is created, if necessary, in the directory in which the chosen data file is located.

#### 4.1.3.2 Format LAS 2.0

This option generates a LAS 2.0 format file in which can be included total natural gamma, selected energy window count rates and certain other log parameters. The exported file is saved to a subdirectory named *LAS*, that will be created if necessary, in the directory in which the chosen field data file is located.

Start the procedure by clicking on the *File, Export to, LAS 2.0* menu options and select a field data file in the dialogue box that will open at this point (Fig.4.9).

If required for your application, select the check box **Reverse depth** to inverse the sense of the exported file. It is also possible to export only part of the field data file by entering start and end depths in this part of the dialogue box.

By means of the check boxes under **Displayed channels**, the user can select from among the different parameters available those which are to be included in the exported LAS format file.

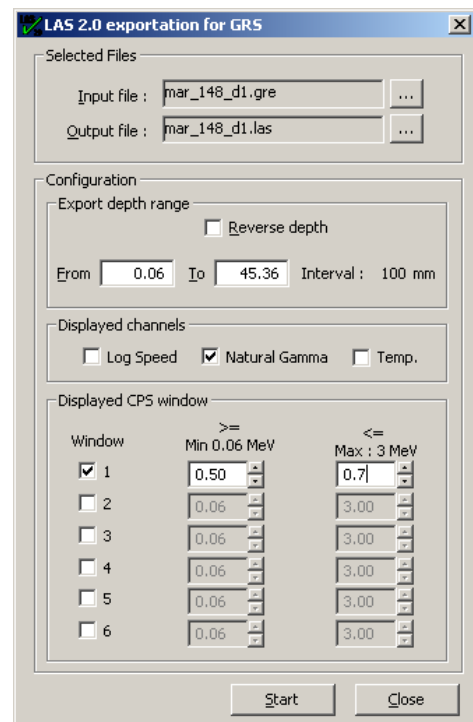


Fig.4.9

Under **Displayed cps window** the user can configure up to six energy windows, over the range 60 keV to 3000 keV, for which total cps output channels will be generated and included in the LAS output file.

#### 4.1.4 Printing :

If necessary, begin by clicking on *File, Set Printer* to define a printer to be used by the application. The name of the selected printer will then appear in the menu.

Once a printer has been configured, two additional menu items become available:

- **Print Scope Picture** : send a copy of the current spectrum « scope » display to your printer.
- **Stacking Auto Print** : this option applies when recording a data file in stacking mode (see section 4.1.2.). When selected, it will cause a hard-copy of the stacked spectrum to be sent to the printer automatically at the conclusion of the acquisition period. The selection of this option will render the preceding menu item (Print Scope Picture) unavailable.

Print output examples :



Fig.4.10. Cs-137 calibration source, vertical scale 200 cps

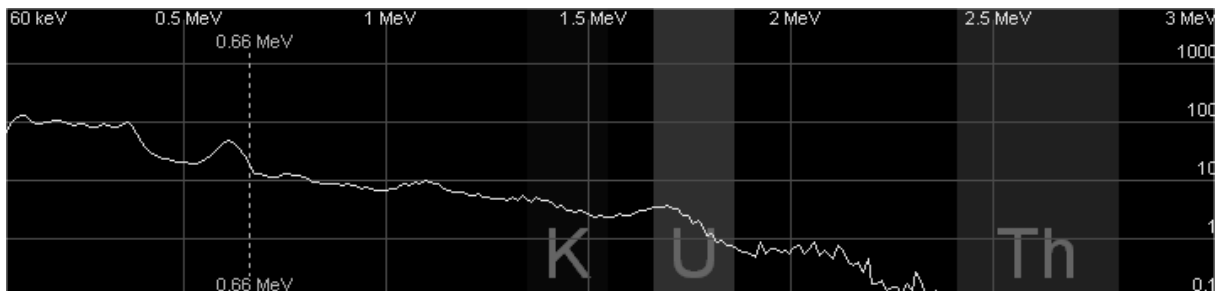


Fig.4.11. Spectrum obtained from a sample of uraninite, logarithmic cps scale.

NB : The image width is automatically adjusted according to the portrait format page size of the chosen printer.

#### 4.1.5 Exit

The *File, Exit* commands will close the program. For safety and data security reasons, power off any connected probe and close any file recording in progress before quitting the program.

## 4.2 Tools menu

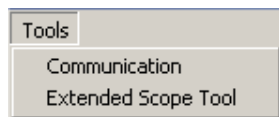


Fig.4.12

Under this menu can be found the most important tools for system and probe configuration, as well as those involved in

Clicking on *Tools, Communication* opens the principal set up and configuration window (see section 2).

The *Tools, Extended Scope Tool* option will open the natural gamma spectrum trace display for the relevant receiver channel (see section 3).

## 5. Appendices

### 5.1 Example EmGRS.tol configuration file

```
[Sonde0]          # internal application reference number of the probe (0 to 9)
SerialNumber=0629 # probe serial number
SondeLength=193  # probe overall length
GammaCoef=1      # natural gamma calibration coefficient - not used
GammaOffset=15   # offset between base of probe and gamma detector in cm
UpGain=9         # last saved uphole receiver gain communications setting
UpBaudDivisor=20 # communications speed setting (DO NOT MODIFY)
UpholePulseWidth=6 # communications pulse width setting (DO NOT MODIFY)
DownholeComDataDrv=25 # last saved downhole drive communications setting
Voltage=100.     # last saved probe voltage value
.
[Sonde1]
SerialNumber=0630
SondeLength=155.
.
etc
```

### 5.2 Example probe import \*.grv file

```
[Sonde]
Client=xxx        # client company name
SerialNumber=0799 # probe serial number
PMT=xx1234       # photomultiplier tube serial number
Xtal=12345       # crystal serial number
SondeLength=112  # probe overall length
GammaOffset=16   # offset between base of probe and gamma detector in cm
GammaCoef=1.00   # natural gamma calibration coefficient - not used
UseRangCoef=yes  # Apply the High Energy compensation (optional) v2.0 and upper
RangeCoef0 = 0.00903737 # CoefA polynomial coefficient to 8 decimal places
RangeCoef1 = 1.19086268 # CoefB polynomial coefficient to 8 decimal places
RangeCoef2 = -0.00094475 # CoefC polynomial coefficient to 8 decimal places
RangeCoef3 = 0.00000095 # CoefD polynomial coefficient to 8 decimal places
LastUpdate=20110308 # last update

~A              # HT voltage temperature compensation table
0;162          # 256 temperature/voltage paired values format T;V
1;162          # T: temperature from 0 .. 63.75 ° by steps of 0.25°
2;162          # V: HT voltage scale from 0..255 -> V = ( N*0.5V + 900V)
3;161
.
.
251;247
252;248
253;250
254;252
255;254
```

**NB :** The temperature compensation data, for up to 10 probes, are stored in binary format in the file EmGRS.off. The modification or erasure of this file can lead to important log data errors or render the application unusable.

## 5.3 Configuration of the energy windows in the spectral "scope" display window.


**N.B.** The information concerning this configuration forms part of the emGRS.tol global application configuration file. Edit this file with great care and always save a backup copy of a working file before attempting any modifications.

```
[eMindLogger]          # Do not modify any parameters in this section of the file, doing so may
                        # lead to major application malfunction.
.
.
[Spectrograph]         # The following lines concern the configuration of the energy windows
UseBackground=yes     # yes = use background, no = do not use background
BkgZ1_Min=1.35        # first window lower limit - (minimum 0.06 MeV)
BkgZ1_Max=1.55        # first window upper limit - (maximum 3.00 MeV)
BkgZ1_Label=K         # first window label (up to 3 characters)
BkgZ2_Min=1.66        # second window lower limit - (minimum 0.06 MeV)
BkgZ2_Max=1.86        # second window upper limit - (maximum 3.00 MeV)
BkgZ2_Label=U         # second window label (up to 3 characters)
BkgZ3_Min=2.41        # third window lower limit - (minimum 0.06 MeV)
BkgZ3_Max=2.81        # third window upper limit - (maximum 3.00 MeV)
BkgZ3_Label=Th        # third window label (up to 3 characters)
```

## 6. What do to if ...

### The data window depth scale does not display correctly.

Check your display colour depth properties:

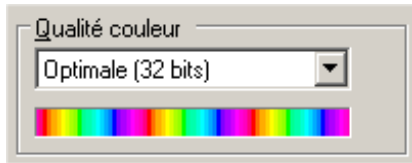

The GRS program is optimised for 32-bit display colour depth.

### An error message « Can't load FTD2xx.dll » appears

This message signifies that the USB driver is either not installed or of an incorrect version for your hardware. Restart the USB driver installation. The necessary files and installation documentation can be found both in the subdirectory "Driver" of the eMind logger GRS application on your hard-disk and on the supplied eMind logger FWS installation CDROM. These files are also available for download from our web site [www.electromind.eu](http://www.electromind.eu) by following the link to the [Software demos/updates](#) page and clicking on [Full package v1.06.06 with user guide FR & UK](#) under *Installation of the USB driver*.

### How to add an additional sonde for use with the system ?

The software is capable of being configured for up to 10 different probes identified by means of serial numbers.

See section 2.2 of this document for information on the procedure regarding the configuration of the system for a new probe.

### I would like to modify the energy windows appearing on the spectral « scope » display.

IMPORTANT: Save a backup copy of your existing working emGRS.tol file.

Using Notepad, edit the « Spectrograph » section of the file according to your desired format (see appendix 5.3).

Save your modified file.

Re-start your eMind GRS application.