



Fishing Tool - User guide

1 - Separate the overshoot sub from the main body of the fishing tool by removing the 6x retaining screws

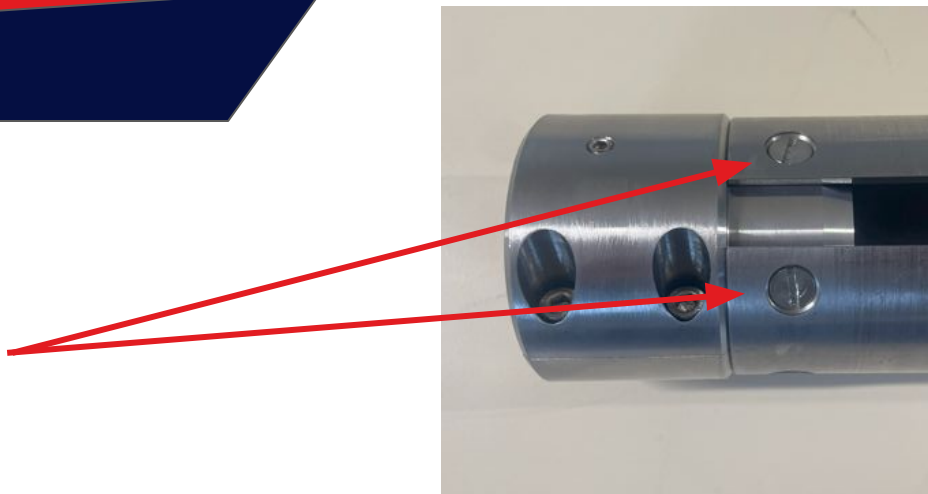

2 - Next remove the 4 x screws in order to separate the two halves of the overshoot sub

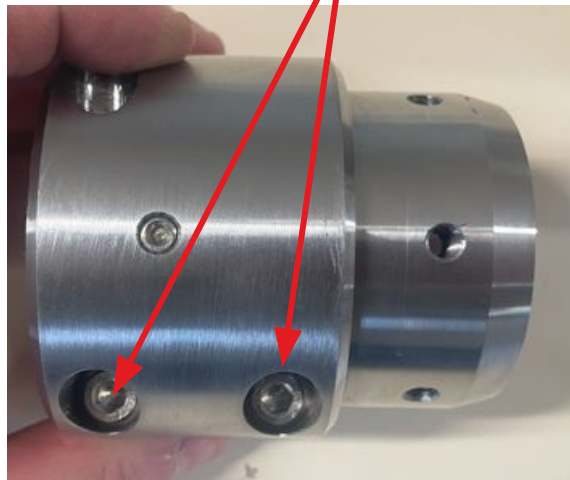

You should now have the various parts disassembled as shown opposite :



3 - Lay the wireline cable flat inside one half of the overshoot sub taking care that the latter is orientated correctly with respect to downhole and uphole directions

**Downhole
side**



**Uphole
side**

4 - Re-assemble the two halves of the overshoot sub taking care not to trap the wireline cable between them

**Downhole
side**




**Uphole
side**

5 - Re-attach the overshoot sub to the body tube - the fishing tool is now ready for use



**Downhole
side**

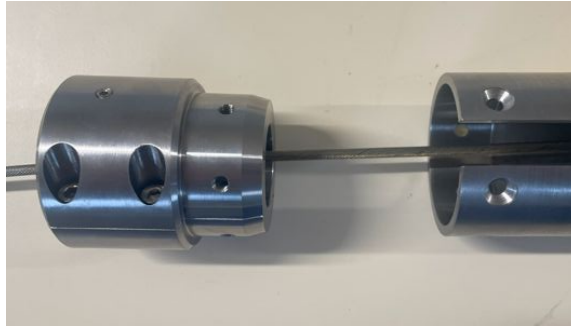

**Uphole
side**

